
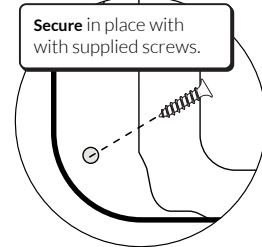
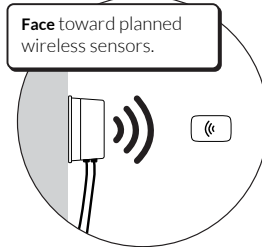






# BRNKL Mate Quickstart

MO3540/2022




## 1 Install hardware

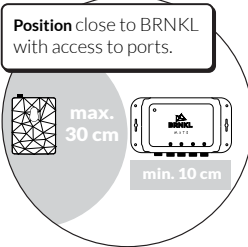

## 2 Connect wiring

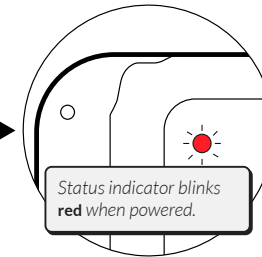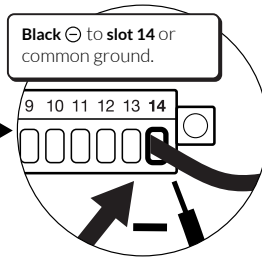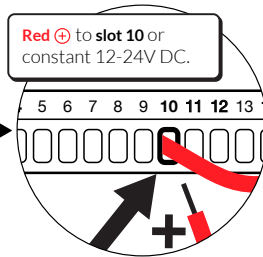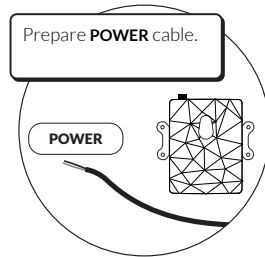





**Warning**  
Disconnect all AC power sources before accessing electrical panels, switches, or devices.

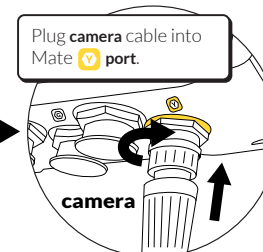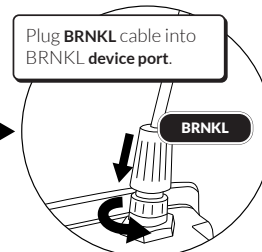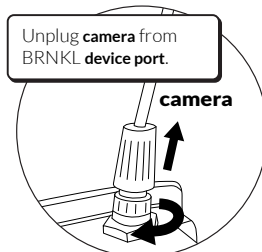

## 3 Link with BRNKL

Turn on Bluetooth®. Don't pair devices.

⚠ Stay within 5 m (15 ft) of the Mate during this process.

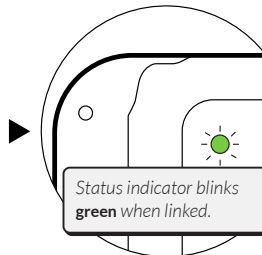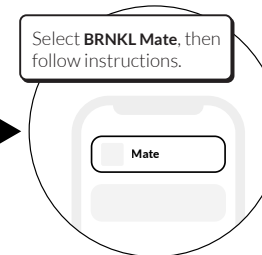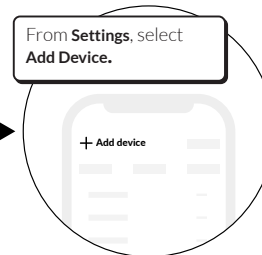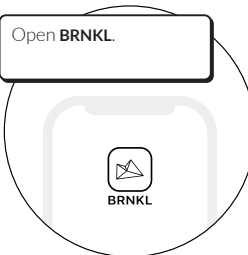


© Copyright 2022 Barnacle Systems Inc. BRNKL is a trademark of Barnacle Systems Inc.







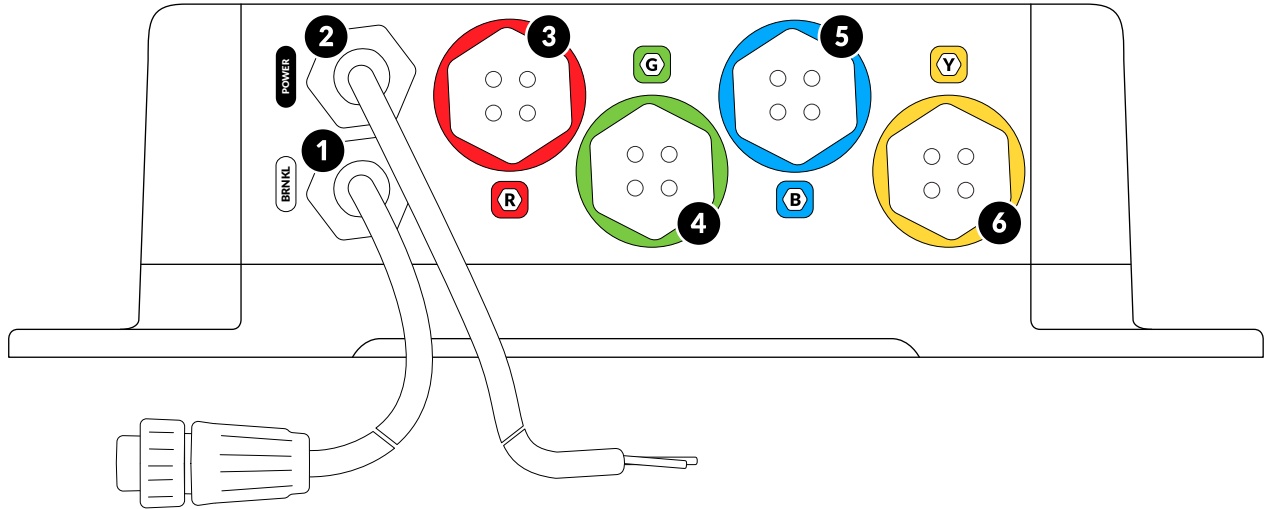







Get more help at [brnkl.io/help](https://brnkl.io/help)



# BRNKL Mate Connections



BRNKL1402022

Terminal	Connection
1 	 BRNKL Device port
2  	 Constant 12-24V DC fuse-protected power  Common ground
3 	 Satellite device
4 	 Multipurpose
5 	 Camera 2
6 	 Camera 1

© Copyright 2022 Barnacle Systems Inc. BRNKL is a trademark of Barnacle Systems Inc.