Table of Contents

Guías de Configuraciones > VIVOTEK > Cámaras IP

¿Cómo saber si hay otro usuario viendo la transmisión de mi cámara?2

¿Cómo saber si hay otro usuario viendo la transmisión de mi cámara?



¿Cómo saber si hay otro usuario viendo la transmisión de mi cámara?

Paso 1. Acceda a la interfaz Web de su cámara y haga clic en "Configuratión".



Paso 2. En la nueva ventana dirijase a el apartado "Security" > "Access list".

		Home Chent Settings Configuration			
	System > General settings				
System	System				
Media	Host name:	SD9364-EHL			
Network	Turn off the LED indicator				
Security	System time				
User accounts	Time zone:				
HTTPS	GMT+08:00 Beijing, Chongqing, Hong Kong, Kuala Lumpur, Singapore, Taipei, Irkutsk 🔽				
Access list 👆	Note: You can upload your dayligh	it saving time rules on Maintenance page or use the cam			
IEEE 802.1x	default value.				
IEEE 802.1x Miscellaneous	default value. ○ Keep current date and time				
IEEE 802.1x Miscellaneous PTZ	default value. C Keep current date and time Synchronize with computer time				
IEEE 802.1x Miscellaneous PTZ Event	default value. Keep current date and time Synchronize with computer time Manual				
IEEE 802.1x Miscellaneous PTZ Event	default value. C Keep current date and time Synchronize with computer time Manual Automatic				
IEEE 802.1x Miscellaneous PTZ Event Applications	default value. C Keep current date and time Synchronize with computer time Manual Automatic NTP server:	192.168.40.141			
IEEE 802.1x Miscellaneous PTZ Event Applications Recording	default value. Keep current date and time Synchronize with computer time Manual Automatic NTP server: Updating interval: 	192.168.40.141 One day			

Paso 3. Haga clic en "Connection management".

VIVOTEK	Home Client settings Configuration Language						
	Security > Access list						
System	General settings						
Media	Maximum number of concurrent streaming: 10 Connection management						
Network	Filter						
Security	Enable access list filtering						
User accounts	Filter type: O Allow O Deny						
HTTPS	IPv4 access list						
Access list 🔚							
IEEE 802.1x							
Miscellaneous	Add Delete						
РТΖ							
Event	Administrator IP address						
Applications	Always allow the IP address to access this device:						
Recording	Save						
Local storage							
Local storage							

Aquí podrá ver las direcciones IP que estan accediendo a la transmisión de la cámara. En este ejemplo se utilizaron 3 transmisiones desde la IP 192.168.40.141.

VIVOTEK		Home Clien	t settings Configu	uration Language
	General settings			
	Maximum number of concurrent str	eaming: 10 🗸 🔽 Co		
Network	Filter			
Security	ID address	Elansed time	Liser ID	
User accounts	192 168 40 141	06:27:51	root	
Access list	192 168 40 141	05:45:56	root	
IEEE BO2.1x	192 168 40 141	05:37:13	root	
Miscellaneous	102.100.10.111	00.01.10	1001	
PTZ	Refresh Add to deny list	Disconnect	Close	
Event				
Applications				
Recording				Save
			ти	c en Línea.com