



CÁMARAS IP FUNCIONES - Rotar imagen

Una vez que estamos en la interfaz Web de la cámara, nos vamos al menú CONFIGURATION dando click



En el costado izquierdo se abre un menú y vamos a seleccionar CAMERA y darle click





Escogemos la primer opción que es el menú de instalador



Y finalmente seleccionamos un valor en IMAGE ROTATION que en este caso quedaría la de 90 grados arriba a la derecha, esto nos sirve principalmente para la vigilancia de pasillos estrechos, si la toma fuera normal horizontal se tendrían paredes a los costados de la imagen, en cambio de esta manera ya tenemos mejor visión de las personas que pasan y adicional como la cámara es Varifocal o lente motorizado, podemos ajustarla mejor estando en esta rotación.

	← → C ▲ No es seguro https://10.6.23.221/Settings.html#page_installer_menu						🖻 🛧 🗯 🖬 🌍 i
	DINION IP 3000i IR						🗋 🖿 🗐 BOSCH
	☐1 Live D1 Playbac	k				OBC Configuration	☐ Links ⊖ Logout 🤅
Rotar imagen	Configuration	M	Installer Menu			×	Preview
	> Connectivity					L	ve preview
	∨ Camera		Sensor mode	30 fps	- HD 1080p 16:9 - HDR 🛛 🔻	 Image: A state of the state of	
	Installer Menu	•	Image rotation	7	90° - upright 🔹 🔻		
	Positioning	•	Mirror-image	On On	Off	June 1	
	Color		Coding standard	H.264	— н.265		
	ALC		Camera LED	Enabled	Disabled		
	Encoder Profile		Reboot device	Reboot			
	Encoder Streams		Factory defaults	Defaults			
	Encoder Statistics				Lens Wizard		
	Encoder Regions						
	Privacy Masks						
	Audio	•					
	Pixel Counter						and the second state of th
	> Recording						
	> Alarm	1					
	> Network	*					
	> Service	el a					