

# Sharing of internet connection with a payment terminal


## Table of contents

1. Payment terminal RNDIS configuration.....	2
2. Windows PC RNDIS configuration.....	2
3. Windows persistent internet connection sharing.....	5

Date	Version	Note
2022-12-21	0.1	Initial version, Windows configuration description

# 1. Payment terminal RNDIS configuration

1. Connect the payment terminal to the PC USB port.
2. On the payment terminal drop-down menu, tap the USB connection options and next select the *RNDIS reverse* option.

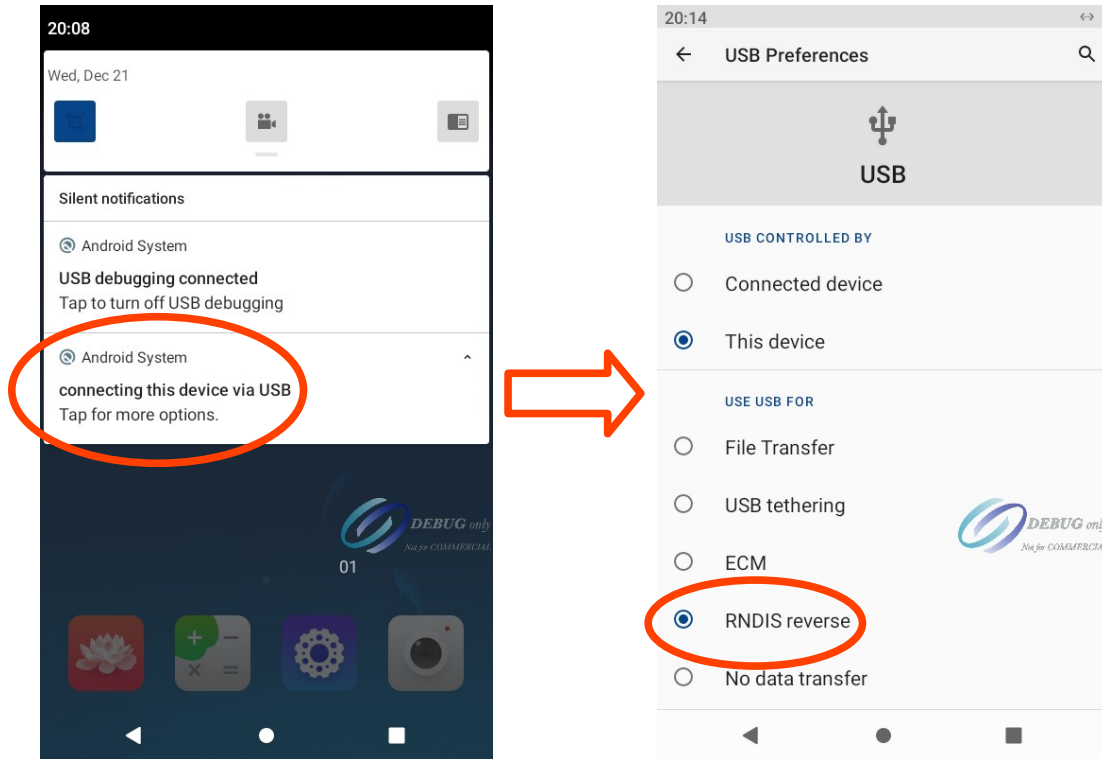


## 3. Set Ethernet IP to DHCP

Go to *Settings* → *Network and Internet* → *Ethernet* → *Ethernet Configuration* and select *DHCP*.


# 2. Windows PC RNDIS configuration

1. On the Windows computer, open *Network Connections* window:
  - Click the Start menu and type *View network connections*
  - Alternatively, open *Control Panel* → *Network and Internet* → *Network and Sharing Center* and click *Change adapter settings*


A new network connection should be available; in this case, *Ethernet 3* is the new one:

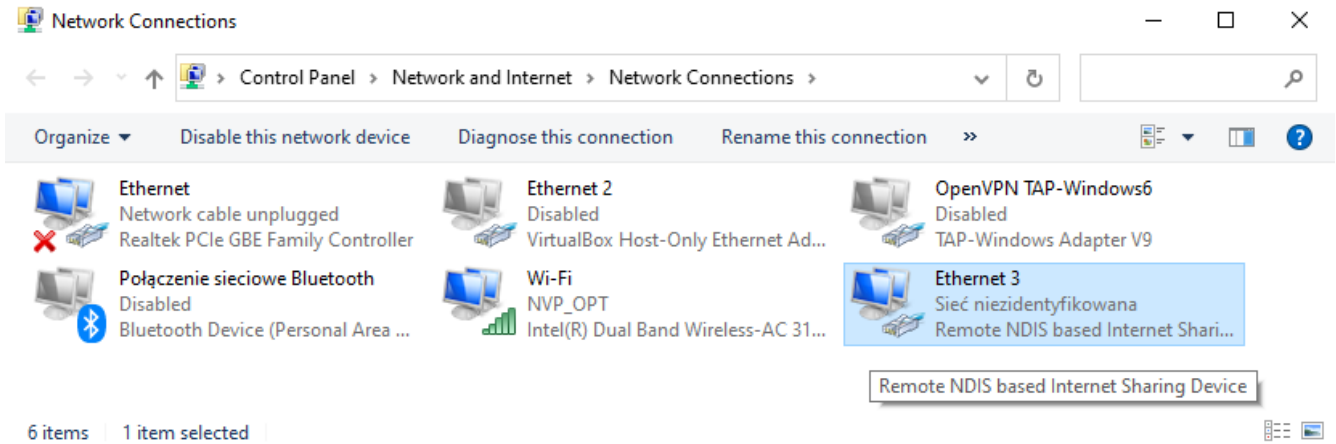


2. Right click the connection with internet access and share it to the payment terminal connection. In this case, *NVP\_OPT* is the connection with the internet access:

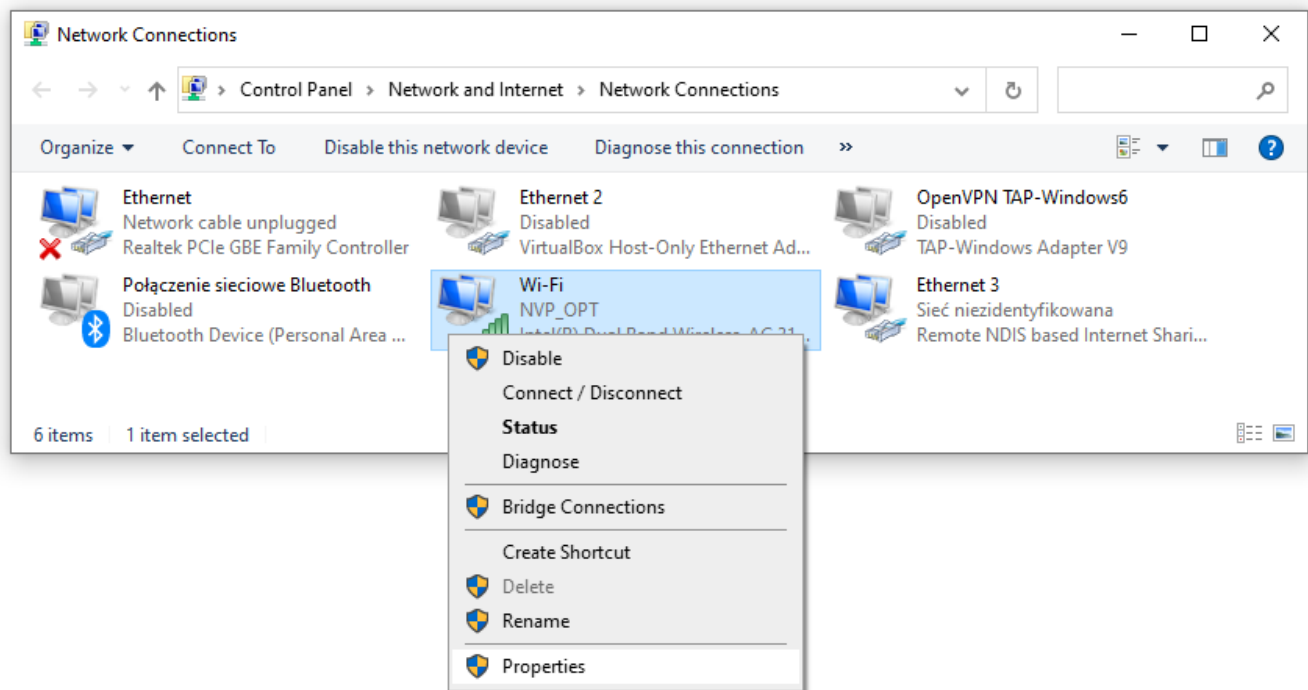


Select the payment terminal RNDIS connection.

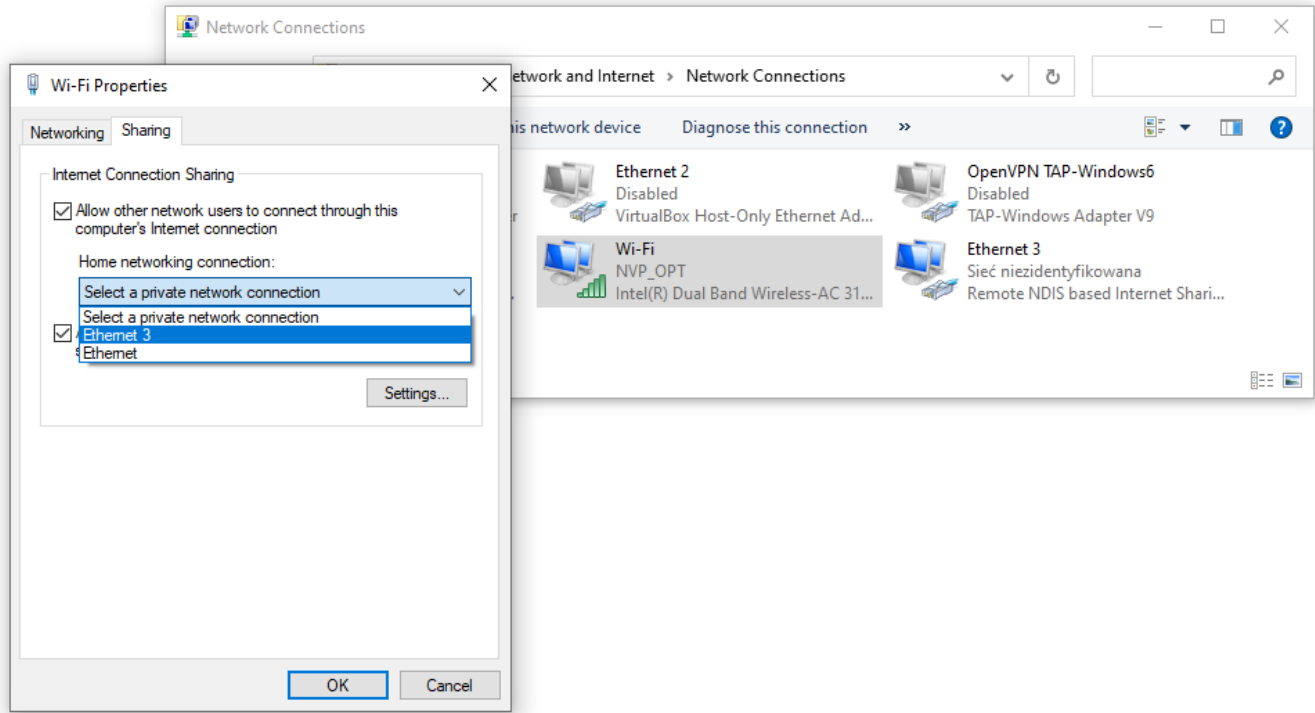

3. Configure the payment terminal connection. Static IP **192.168.42.1**, netmask **255.255.255.0**

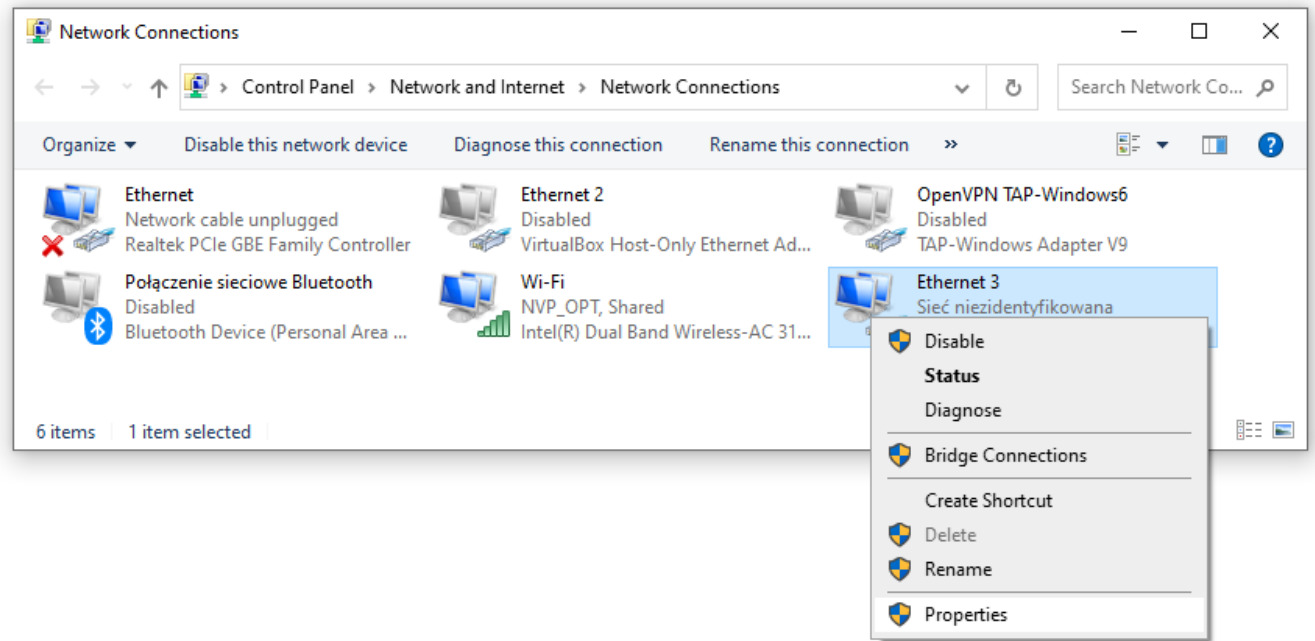

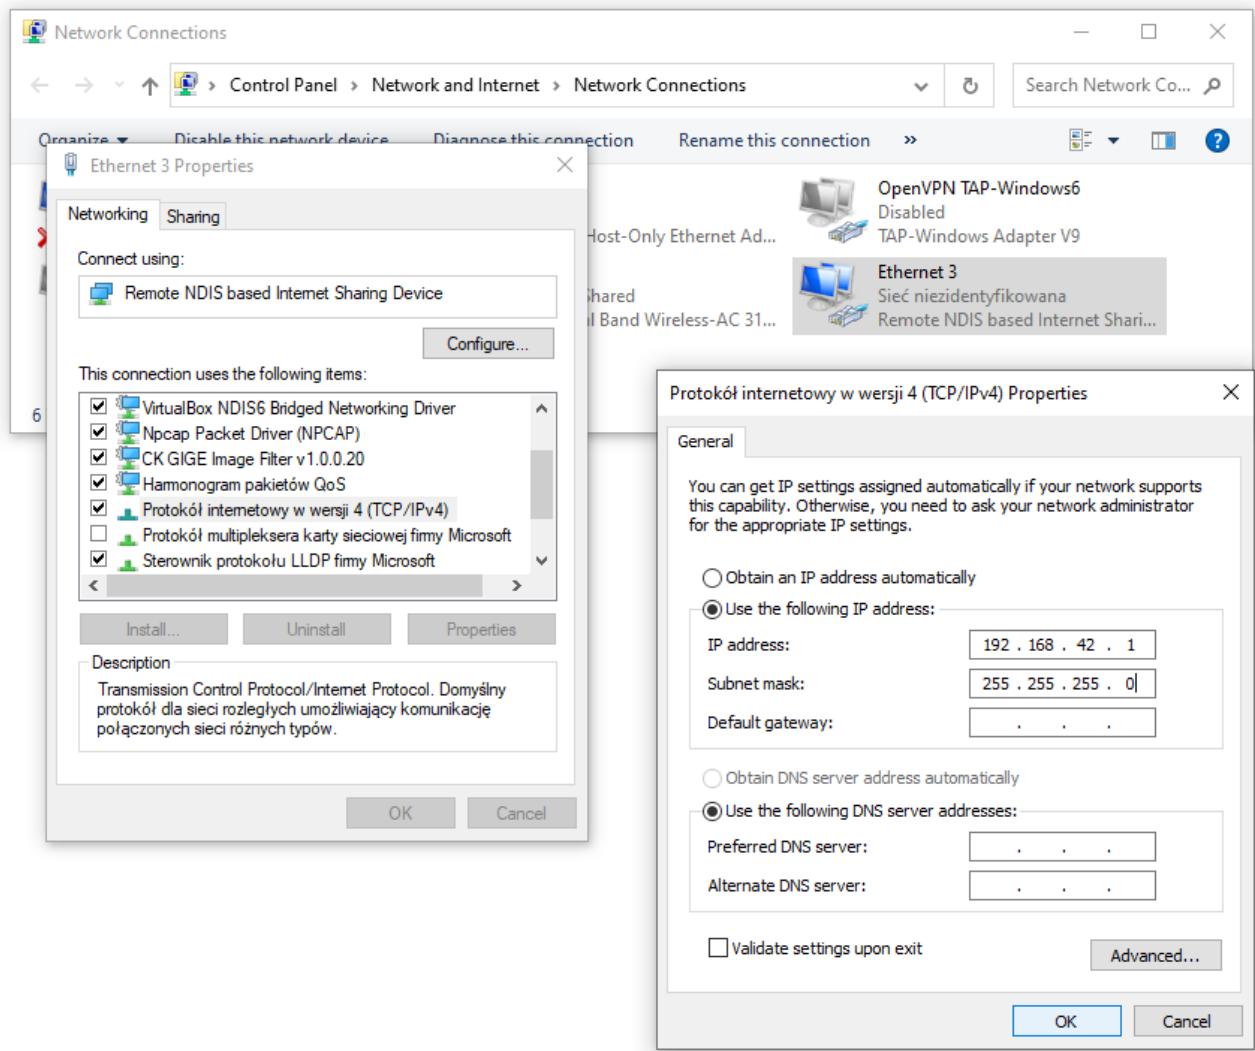


The payment terminal should now have internet access.

### 3. Windows persistent internet connection sharing

How to make ICS available event after PC reboot.

1. Open Windows Power Shell with administrative privileges.

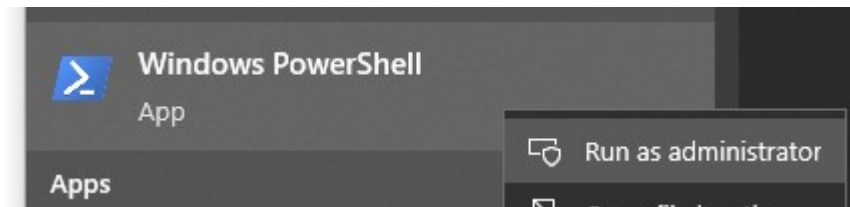

2. Run the following command:


```
New-ItemProperty -Path HKLM:\Software\Microsoft\Windows\CurrentVersion\SharedAccess -Name EnableRebootPersistConnection -Value 1 -PropertyType dword
```

### 3. Open Services

Type *Services* in Start menu or open the Run command by pressing Windows + R and type *Services.msc* and hit enter. This will open the Services management console.

4. Look for the **Internet Connection Sharing service (ICS)**. Double click to open its properties.

5. Set startup type to **Automatic**.

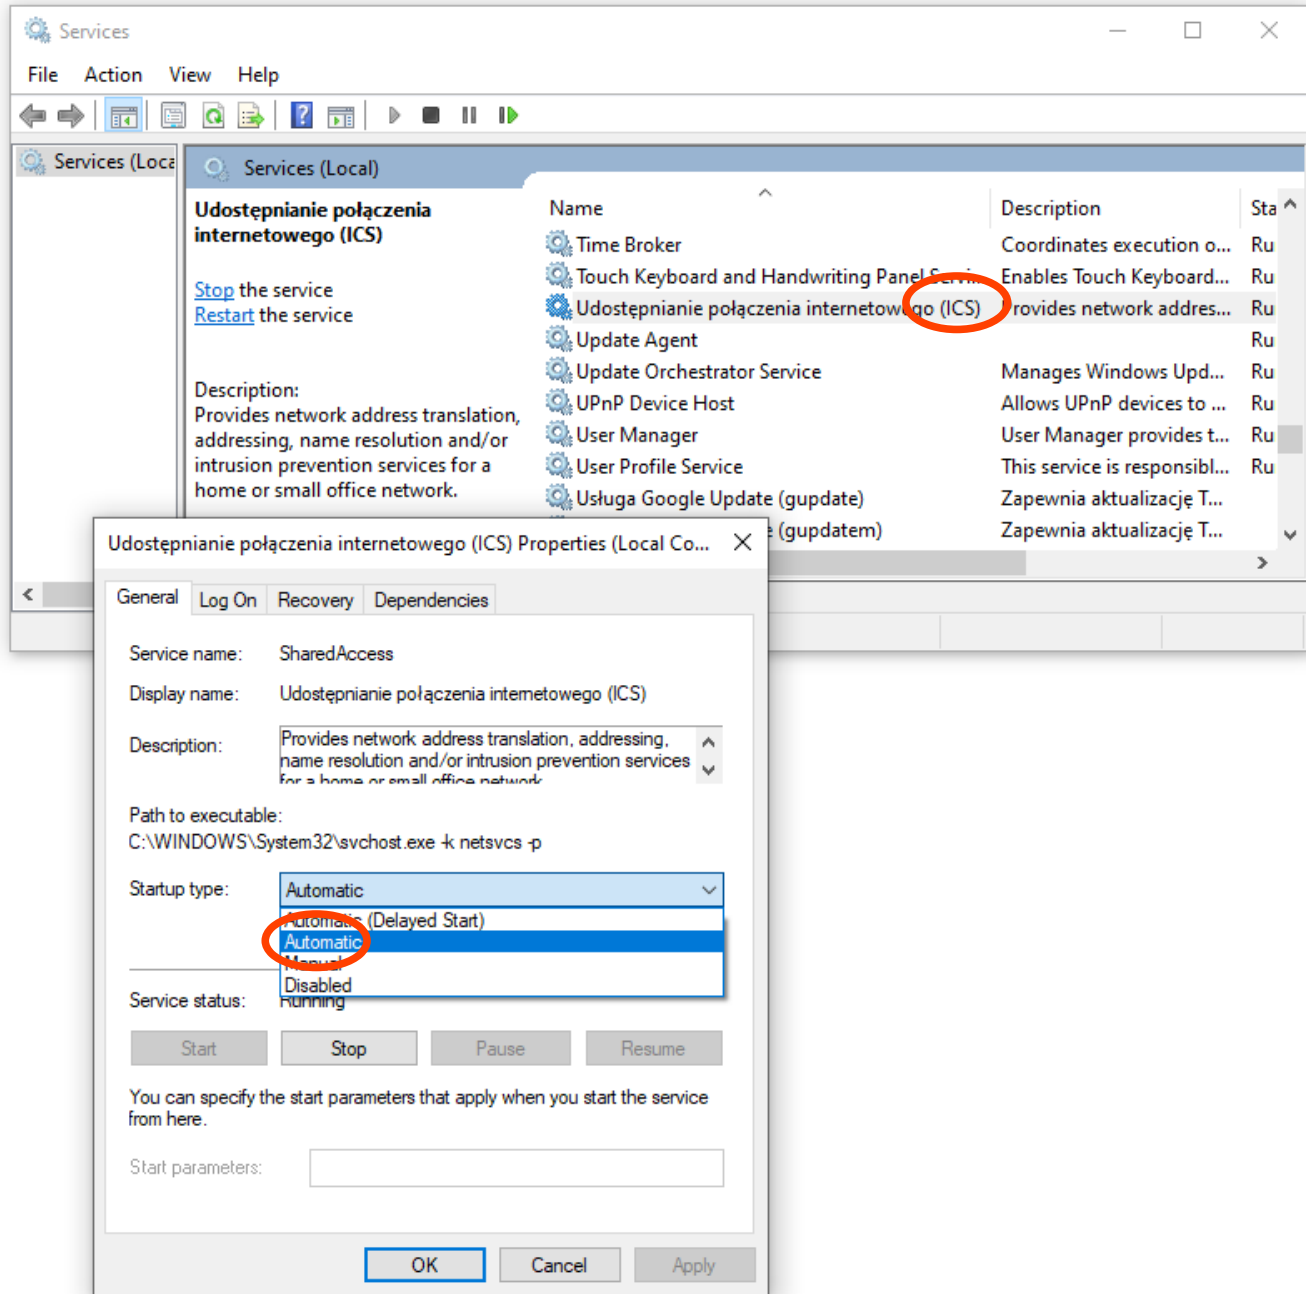

The *Internet connection sharing* service will run automatically at Windows startup.