




BRNKL Rapid Deploy AC


Quick Reference

Power settings


Prepare

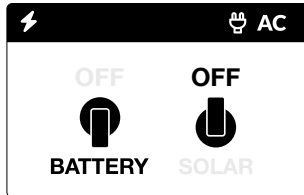


Transport

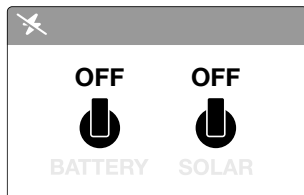

Deploy

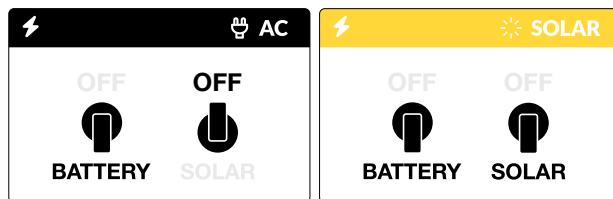

Store

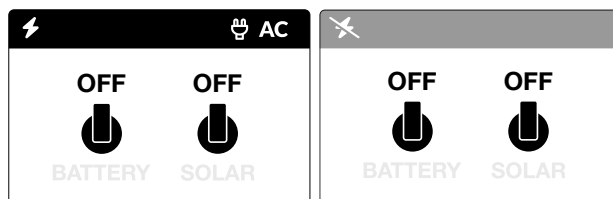


Solar charge indicator


Connected Charging Low voltage

Device settings

Float switch

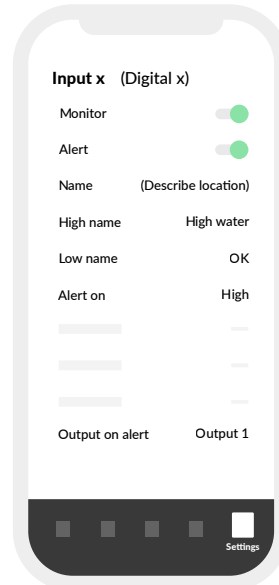

Door sensor

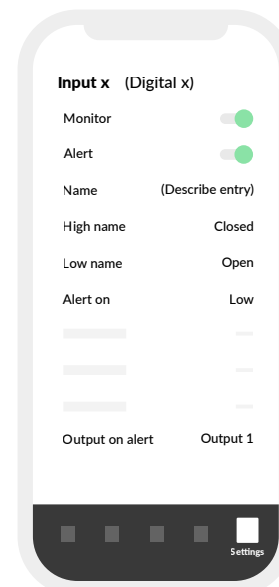

Get more help at brnkl.io/help

