 


Standalone Solution(No phone service provider):

Step 1: Find the IP Address of the phone

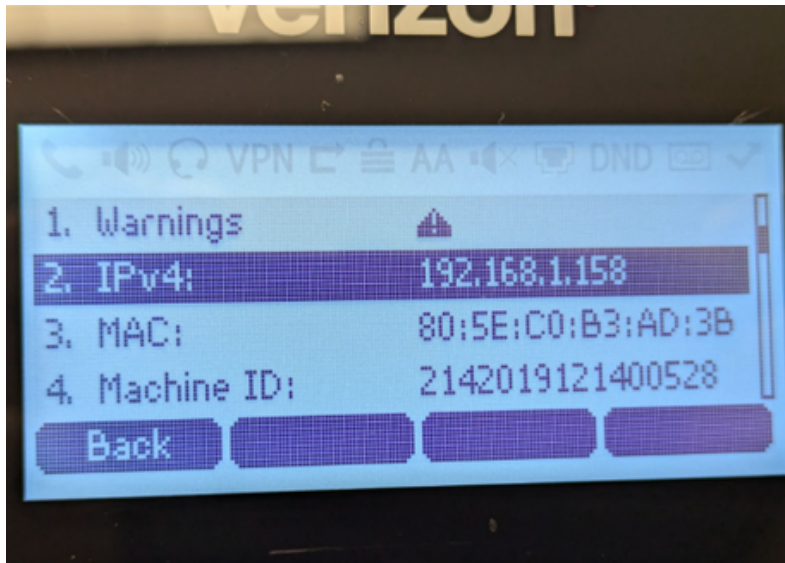

Step 2: Log into the phone IP through any webpage

A screenshot of the Yealink T42S web interface. The browser address bar shows 'https://192.168.1.158/...'. The interface has a green header with the Yealink logo and navigation tabs: Status, Account, Network, Dsskey, Features, Settings, Directory, and Security. The 'Directory' tab is selected. A table lists contacts:

Index	Name	Office Number	Mobile Number	Other Number	All Contacts
1	IP SPEAKER	124@192.16...		124@192.16...	All Contacts
2	IP SPEAKER	123@192.16...		123@192.16...	All Contacts

Below the table, there is a 'Directory' form with fields for Name, Office Number, Mobile Number, Other Number, Ring Tone, Group, Account, and Auto Divert. The 'Name' field is highlighted with a red box and contains 'IP SPEAKER'. A red box also highlights the 'Add' button. To the right, there is a 'Group Setting' section with fields for Group and Ring, and an 'Import Local Directory File' section with buttons for Import XML, Export XML, Import CSV, and Export CSV. A 'NOTE' section on the right provides instructions on how to use the local directory.

Example: 124@SpeakerIPAddress

Copyright © 2025 Yealink Inc. All rights reserved.

 
Step 3: Dial the new contact number on the phone to call directly to the speaker

Video Demo: https://drive.google.com/file/d/1ETHiH_hXyOQv-zaaczoBZmpFWjWne8CN/view?usp=sharing


Existing Service Provider:

Notes: No software, licensing, activation keys, Extensions or SIP Servers required


Step 1: Go to the phone **directory**

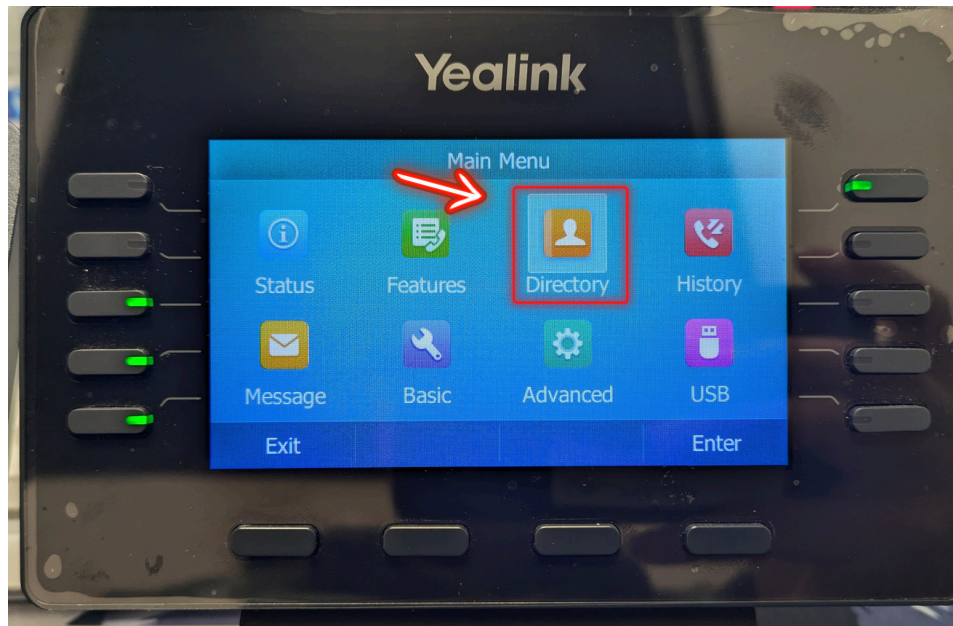

 
Step 2: Select **Local Directory** and click **Enter**

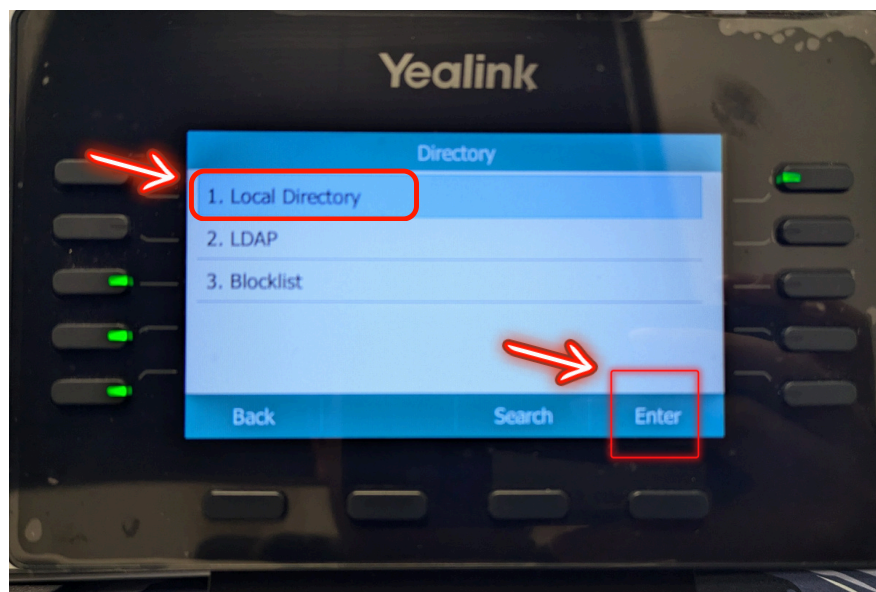

 
Step 3: Select **All Contacts** and click **Enter**

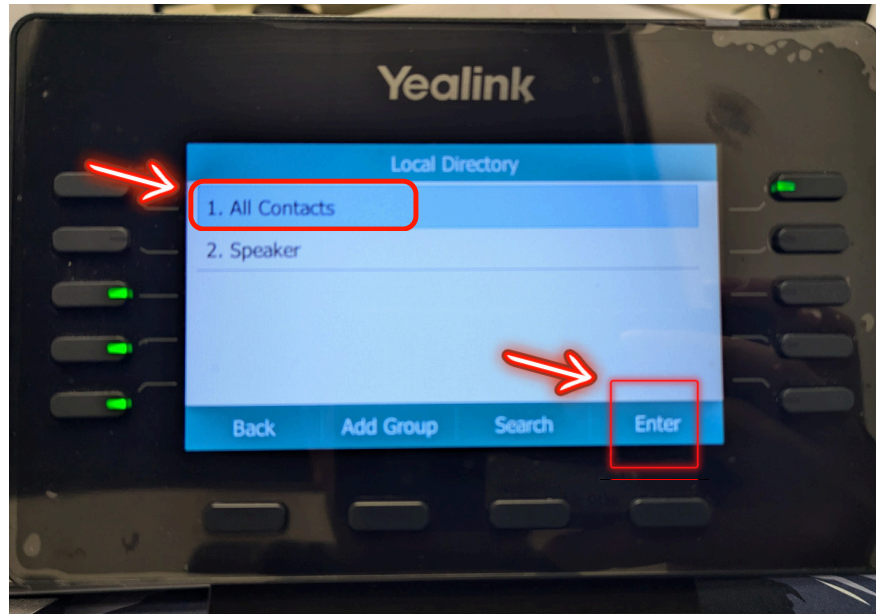

 
Step 4: Select **Add**

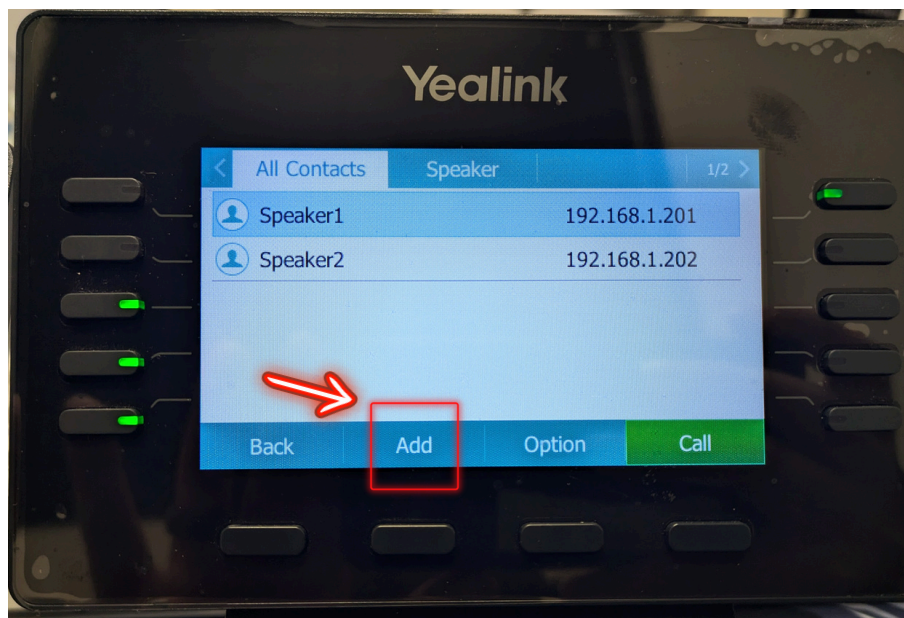

 Step 5: Input a **Name** for the Speaker and under **Office Number** input the **Speaker IP Address** then click **Save**

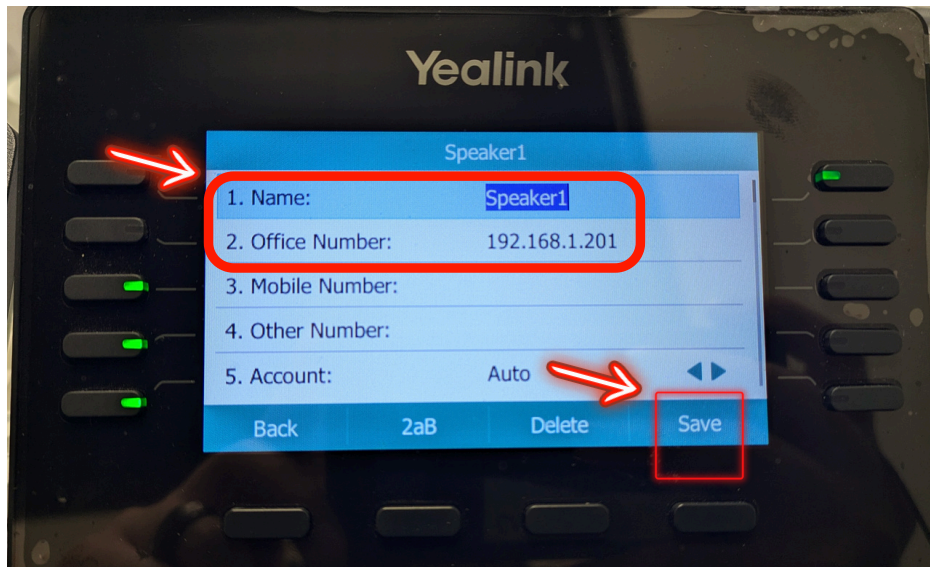

 Step 6: Select the speaker and press **Call**

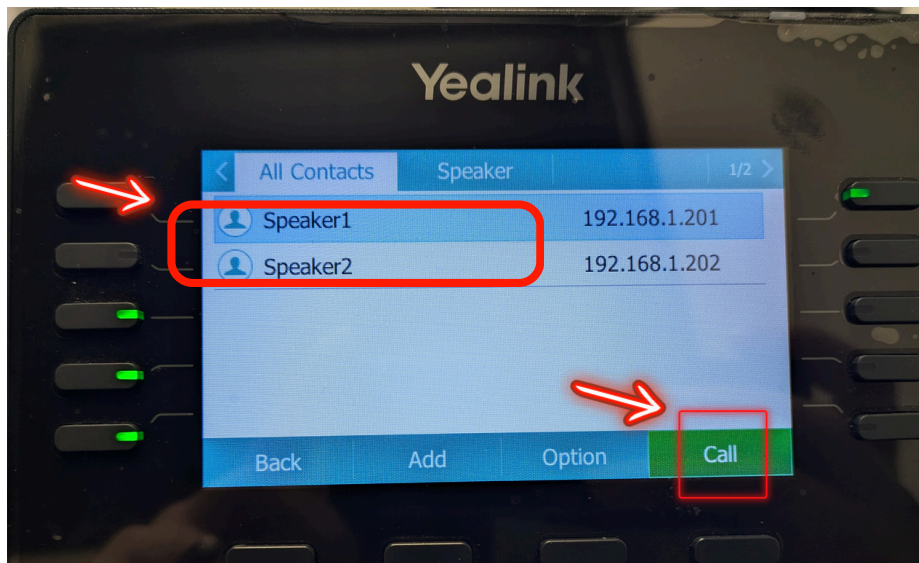


Step 7: Phone now has a direct line to the IP Speaker




Group Calling:

 
Step 1: Select Conference

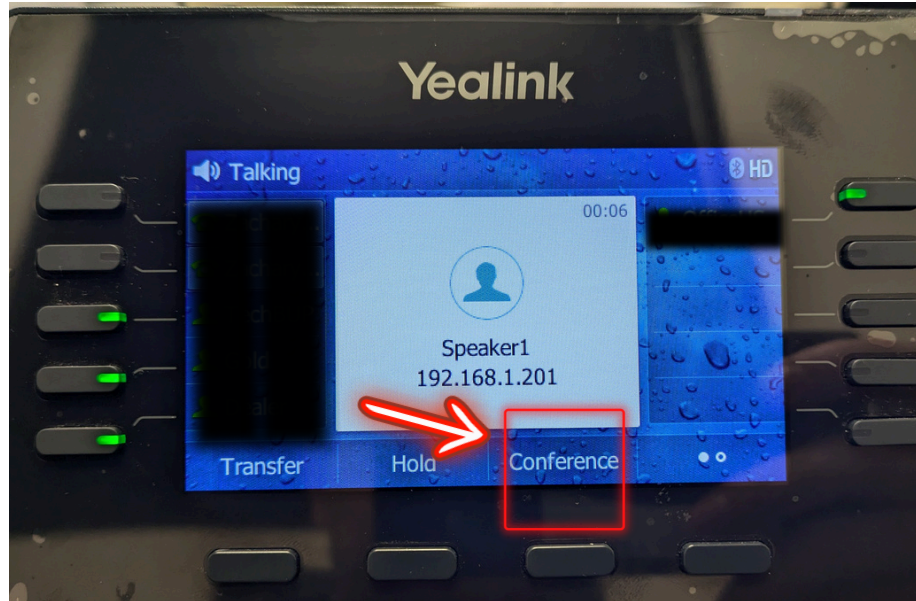

 Step 2: Dial the Name or Number of additional speakers

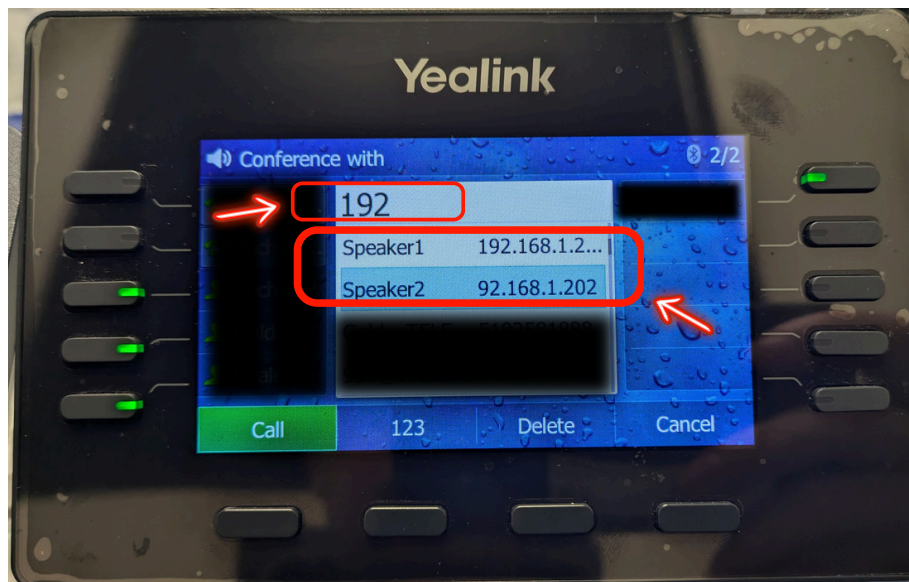

 Step 3: Select Conference

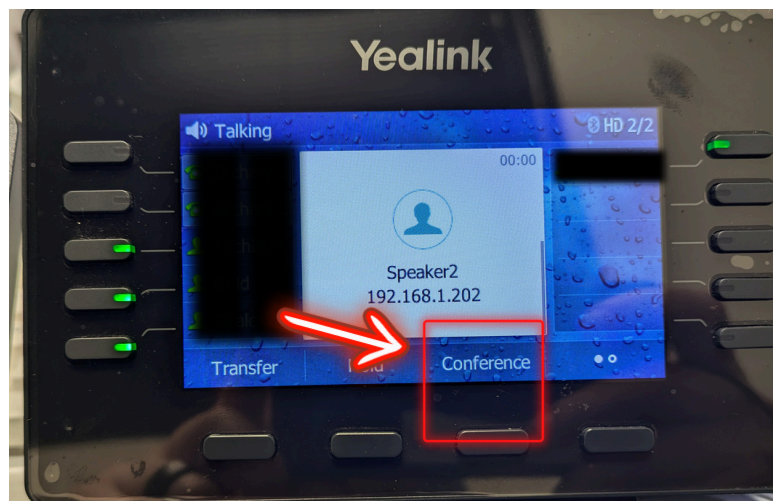

Step 4: Talk from all Speakers

