



Installation Guide

IR Controller



Welcome to Akubela Home!

This installation guide will walk you through installing Akubela IR controller and putting it into pairing mode.

Before We Start	2
In The Box	4
Product Overview	5
Installation	6
Pairing Mode	8
Get Help	10

Before We Start

Your first time installing Akubela IR controller may take up to 10 minutes.


You' ll get faster after each installation.



Warning!

Keep the device and all its parts out of the reach of children. The small parts or accessories contained may be a choking hazard to them.


In The Box

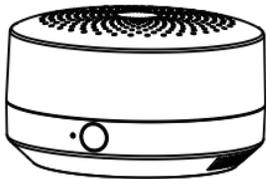

IR Controller x1



 
Base x1




Screw x3



Wall Anchor x3

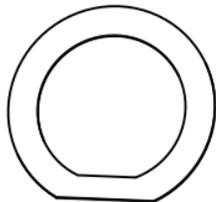


Double-sided Adhesive x2

 


Type-C power Cable x1


Product Overview

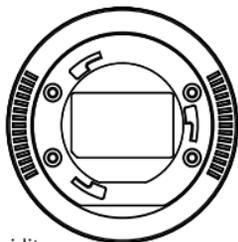


Temperature and humidity
detection

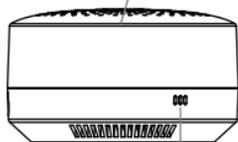


Buzzer

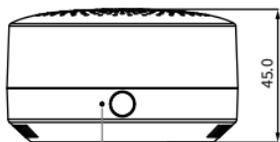

LED indicator
Networking button

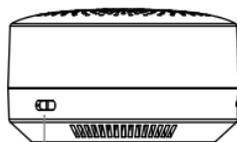

USB power supply

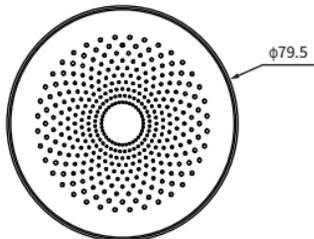

$\phi 79.5$

Installation

You can place the IR controller on the desired location for immediate use, or use the provided double-sided adhesive or screws for mounting the device on a surface.


Note

To ensure the best performance, keep a direct and unobstructed line of sight between the receiver and the IR controller. Make sure the distance between them does not exceed 15 meters, and the optimal distance is within 7 meters.

Placing IR Controller on a Table for Direct Use

1. Place the controller on a flat and stable surface, such as a desk or table.
2. Connect the device to a USB wall charger using the provided USB cable. Make sure that the wall charger has a DC output of 5V/1A.

Mounting IR controller with Double-sided Tape

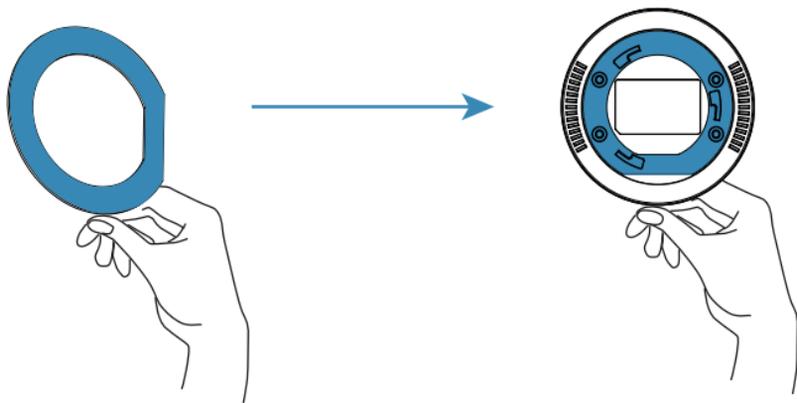

1. Make sure the surface is clean and dry before applying adhesive.
2. Apply the included 3M double-sided tape to the bottom of the controller.
3. Remove the other backing.
4. Press the device firmly with both hands for 30 seconds to secure it in place.

Pairing Mode

Note

Before pairing the IR controller, ensure that your HyPanel series devices are installed and have completed their initial setups, as the controller must be used with HyPanel series devices.

Putting IR controller into pairing mode

1. Power the controller by connecting it to a wall charger using the included USB cable. The charger must have a DC output of 5V/1A.
2. Press and hold the button on the side of the controller until a green indicator light blinks slowly and a beep sound is heard. The controller enters the pairing mode.

To add the IR controller to your HyPanel series devices, use either BelaHome app or HyPanel devices.

- Once successfully paired, a beep sound will be heard, and a green indicator light will be on for 5 seconds. Alternatively, you can see the IR controller on the panel you want to pair it with.
- If the pairing process is unsuccessful, 2 beep sounds will be heard and a red light will be on for 5 seconds.

Congratulations!

You are done with the installation!

Get Help

Need help or more information?

Visit us at:

<https://ticket.akuvox.com/>



Y54J000004