


1

The crank handle for the awning is located in the front section of the pod on the left hand side (refer to where arrow is pointed).




2

Hook the end of the handle onto the awning and rotate anti-clockwise to unroll. Once it has extended approximately 1m, it's best to have another person support the end of the awning as it extends further.

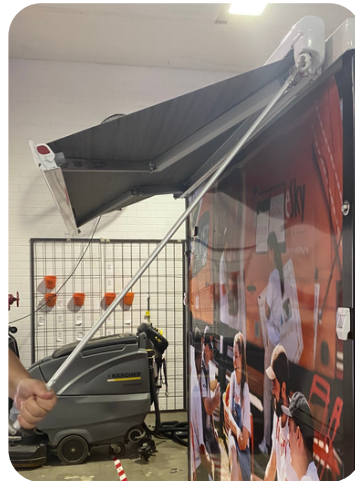


3

As the awning approaches full extension, it is now time to unhook the two supporting legs. First, the legs must be grasped near their hinge-point and pulled toward you. They will now be able to be rotated downward and extended to the marked position. Please ensure the securing knob is sufficiently tight.

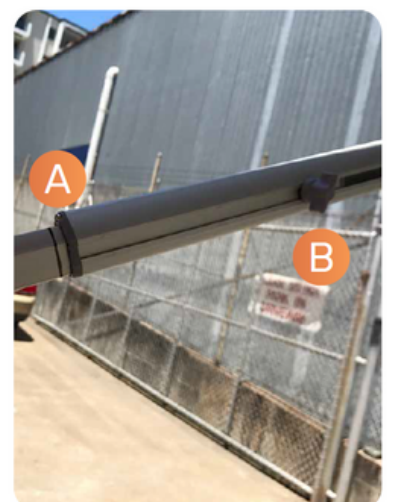

4

Lift up the upper tab and place the foot of each supporting leg into their respective positions on the side of the pod. Once in place, slide the upper tab down to secure the legs into place.

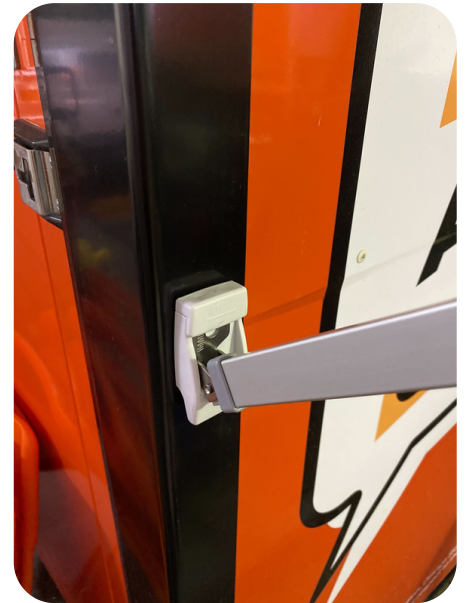

5

The awning may now be readjusted using the crank handle to ensure the shade sail is sufficiently tight.

It is best to store the crank handle back inside the pod while the awning is in use.



6

Rolling the awning back up is the reverse of the setup procedure. Please ensure the end of the awning is securely seated to the casing and remember to stow the crank handle in the appropriate location.

ATTENTION

We remind you that the awning is designed to protect from the sun, and not from rain, wind or snow. In these cases, we recommend to roll it up!

